MIDMARK®

INSTALLATION INSTRUCTIONS FOR 9A62 BASE RAILS ON MODELS 111, 112, 114, 117, AND 119 TABLES.

1. Elevate table to its highest position.

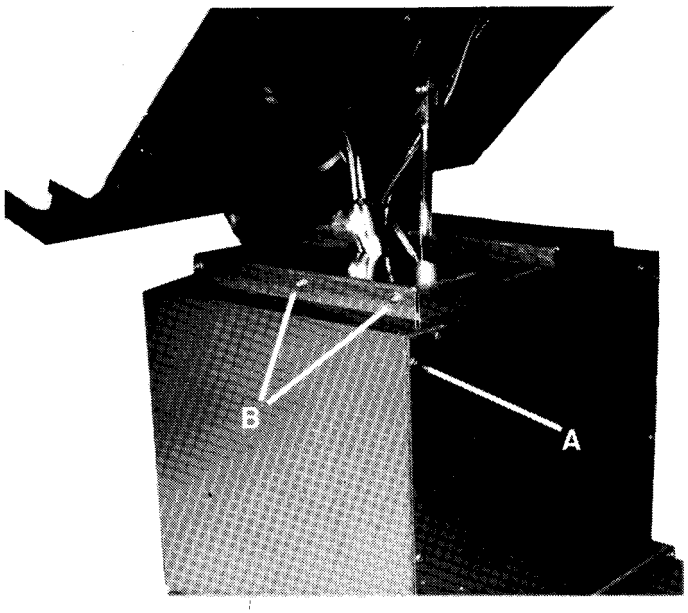

FIGURE 1

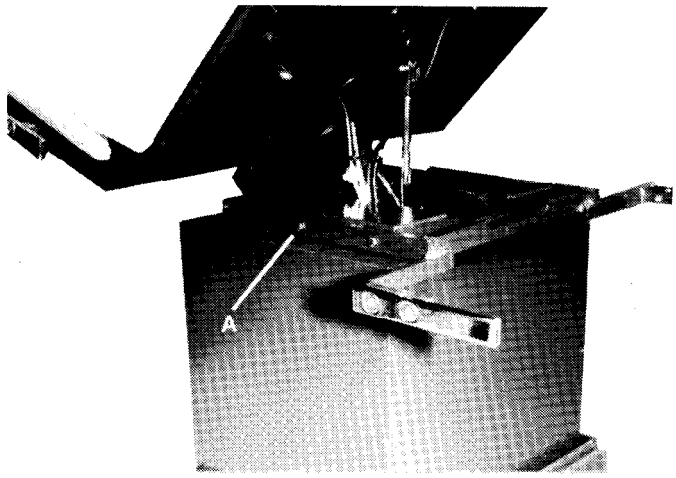

FIGURE 2.

2. Remove front inner shroud by removing eight (8) screws, Item A, Figure 1.
3. Remove two (2) metal screws, Item B, Figure 1 from each side of shroud mounting plate.
4. Hold side shroud assembly in its original position. Drill out the two holes to 9/32" diameter on each side of shroud mounting plate. These are the two holes from which the metal screws (Item B, Fig. 1) were removed.
5. Place the base rail weldment into position so that the holes in it and the shroud sides align with the 9/32" holes in the shroud mounting plate.
6. Install two (2) 1/4" - 20 x 1" screws, lockwashers, and nuts on each side, Item A, Figure 2.
7. Replace front inner shroud with eight (8) screws removed in Step 2.

NOTE: Make certain that hose and wire bundle on underside of seat lines up with the cutout on the base rail weldment when the seat section is lowered.

MIDMARK"
Medical Products
MIDMARK CORPORATION,
VERSAILLES, OHIO 45360 937/526-3662

All product subject to improvement without notice
Litho in U.S.A. Industry Code 0251 003-0370-00 Rev. B (8/98)
Copyright By Midmark Corporation 1986